



CHRYSLER NAVIGATION INSTRUCTIONS

To 'DALLAS TEXAS'

- 1 PRESS **NAV** BUTTON
- 2 ROTATE **BOTTOM KNOB** TO HIGHLIGHT '**DESTINATION MEMORY**' AND PRESS **BOTTOM KNOB** TO CONFIRM
- 3 ROTATE **BOTTOM KNOB** TO HIGHLIGHT '**DALLAS TEXAS**' AND PRESS **BOTTOM KNOB** TO CONFIRM
- 4 PRESS **BOTTOM KNOB** TO SELECT '**START ROUTE GUIDANCE**'

TO **REPEAT VOICE** INSTRUCTIONS AT ANY TIME, PRESS **RPT** KEY
TO ADJUST **NAV VOLUME**, ROTATE **VOLUME KNOB** DURING VOICE INSTRUCTION

To 'LOS ANGELES CALIFORNIA'

- 1 PRESS **NAV** BUTTON
- 2 ROTATE **BOTTOM KNOB** TO HIGHLIGHT '**DESTINATION MEMORY**' AND PRESS **BOTTOM KNOB** TO CONFIRM
- 3 ROTATE **BOTTOM KNOB** TO HIGHLIGHT '**LOS ANGELES CALIFORNIA**' AND PRESS **BOTTOM KNOB** TO CONFIRM
- 4 PRESS **BOTTOM KNOB** TO SELECT '**START ROUTE GUIDANCE**'

VISIT WWW.RB4NAVIGATION.COM FOR MORE INFORMATION
AVAILABLE THROUGH MOPAR® AT SELECT DODGE, CHRYSLER & JEEP DEALERS



3-IN-1 FEATURE FUNCTIONALITY

• TURN-BY-TURN GPS NAVIGATION • CD PLAYER • AM/FM STEREO



SIRIUS

NAVTEQ
ON BOARD